 




# FIRETRACKER FT128 FIRE ALARM SYSTEM QUICK OPERATION GUIDE

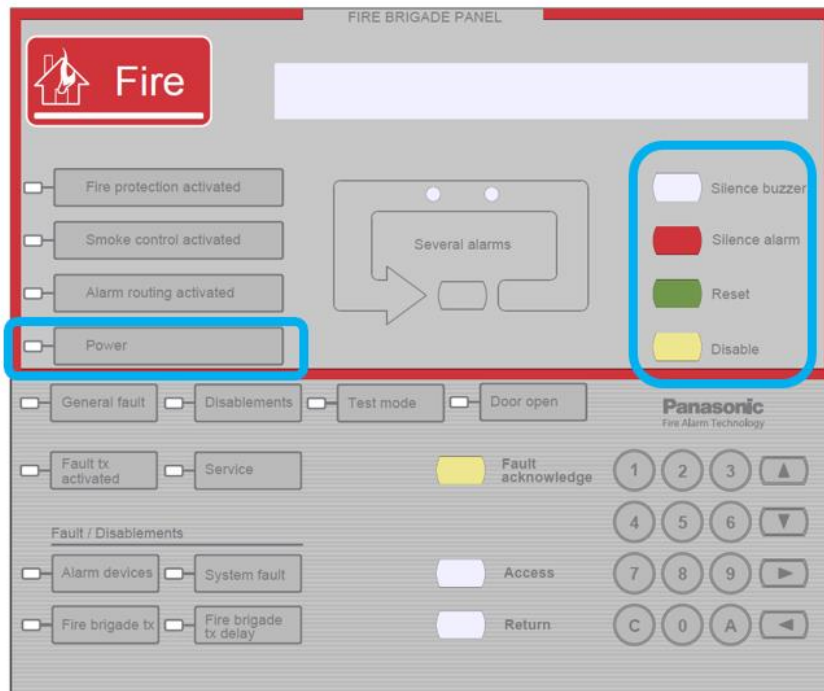

Normal  
Condition –  
Green LED  
illuminated

To operate the panel:


Start from the top  
button and work down  
using these four  
buttons

## 1 - TO SILENCE PANEL BUZZER:

Press  Button **once** to silence panel buzzer.

**Caution.** Pressing the  Button again will cause the buzzer to resound.


## 2 - TO SILENCE ALARM DEVICES:

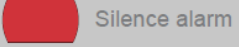Press  Button **once** to silence all alarm devices, sounders or Occupant Warning System (OWS) and wait for a few seconds.

**Caution.** Pressing the  Button again will cause the alarms to resound.

## 3 - TO RESET FIRE ALARM:

**IMPORTANT: Alarm devices must be silenced before pressing “Reset” button.**



Press and hold the  Button for 1 second until the Fire Alarm Panel starts its reset sequence. The system will now automatically reset all alarms.

**Alarms may re-trigger in the system if the alarm condition is still present. Wait for 30 seconds and try again.**





## 4 - TO DISABLE (ISOLATE) AN ACTIVE ALARM:




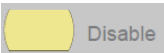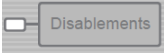





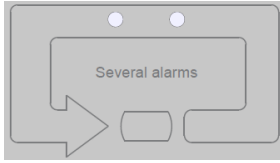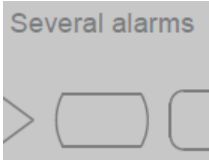




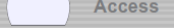

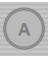
**IMPORTANT: Alarm devices must be silenced before pressing “Disable” button.**

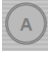Press  Button to isolate device in alarm – system will now illuminate the  LED. This zone / address point will remain disabled until manual re-enabled via Menu H2/B6 button.

## 5 - TO DISPLAY MORE THAN ONE ALARM :

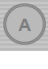








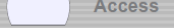


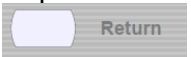
When the **Alarms queued** red LED's are illuminated . Press the  Button to see the additional Alarms.

## 6 - TO MANUALLY DISABLE (ISOLATE) AN ALARM POINT FROM THE MENU:










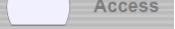

1. Press  button.
2. Key Enter Access Code.
3. Scroll to the **Disable or re-enable** menu (H2) by pressing  or  button/s then press  to Accept
  - a. **DISABLE SINGLE POINT**
    - i. Scroll to the **Disable address** menu (B2) by pressing  or  button/s then press  to Accept.
    - ii. Type in the address number as required, then press  to Accept.
  - b. **DISABLE WHOLE ZONE**
    - i. Scroll to the **Disable zone** menu (B1) by pressing  or  button/s then press  to Accept.
    - ii. Type in the address number as required, then press  to Accept.
4. When prompted with “Re-enable time”:
  - a. If re-enable time not required, use scroll buttons  or  to highlight **No** then press to  Accept.
  - b. If required, key in the time in hours:minutes (default is current time + 3 Hours), scroll highlight to **Yes** then press to  Accept.
5. Press the  Button repeatedly until the menu returns to the date / time screen.











## 7 - TO MANUALLY RE-ENABLE AN ALARM POINT FROM THE MENU:

1. Press  Button.
2. Key Enter Access Code.
3. Scroll to the **Disable or re-enable** menu (**H2**) by pressing  or  button/s then press  to Accept
  - a. **RE-ENABLE SINGLE POINT**
    - i Scroll to the **Re-enable address** menu (**B5**) by pressing  or  button/s then press  to Accept.
    - ii The disabled address will be displayed or type address number as required, then press  to Accept
  - b. **RE-ENABLE WHOLE ZONE**
    - iii Scroll to the **Re-Enable zone** menu (**B6**) by pressing  or  button/s then press  to Accept.
    - iv The disabled zone will be displayed or type in the zone number as required, then press  to Accept
4. Press the  Button repeatedly until the menu returns to the date / time screen. +
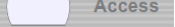
## 8 - TO CHECK EVENT LOG:






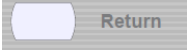




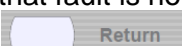
1. Press  Button.
2. Key Enter Access Code.
3. Scroll to the **Present System Status** menu (**H4**) by pressing  or  Button/s then press  to Accept
4. Scroll to **Disablement** menu (**U1**) by pressing  or  Button/s then press  to Accept
5. Scroll to **Event Log** menu (**U6**) by pressing  or  Button/s then press  to Accept
6. Select event Log: 0=Alarm, 1=Interlocking, 2=General, then press  to Accept.  
The most recent event is shown in the top of the list
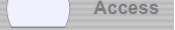
## 9 – CHECK THE CURRENT SOFTWARE VERSION OF THE MAINBOARD

1. Press  Button.
2. Key Enter Access Code.
3. Scroll to the **Present System Status** menu (**H4**) by pressing  or  Button/s then press  to Accept
4. Scroll to **Version and Alarm Counter** (U7) by pressing  or  Button/s then press  to Accept
5. Press the  Button repeatedly until the menu returns to the date / time screen.



## 10 – TO ACKNOWLEDGE FAULT

1. Press  Button.
2. Key Enter Access Code.
3. Scroll to the **Acknowledge Fault** menu (H6) by pressing  or  Button/s then press  to Accept
4. Scroll to check the list of faults by pressing  or  Button/s then press  to Access the fault.
5. Scroll to Fault Acknowledge (P6) by pressing  or  Button/s then press  to Accept. The status for that fault is now Acknowledged. When this fault is corrected it will be removed from the list.
6. Press the  Button repeatedly until the menu returns to the date / time screen.

## 11 – TO CHECK FAULTS INFORMATION

1. **Refer to Operation Manual FT128 Rev 2.4**, check for the fault and resolution process.

FAULT: 24 V for external equipment	Page: 63
FAULT: 24 V for routing equipment	Page: 63
FAULT: 24 V output, techn address xxx	Page: 63
FAULT: AAU x	Page: 63
FAULT: Battery	Page: 63
FAULT: Battery charging	Page: 63
FAULT: Battery, tech. address xxx ?	Page: 63
FAULT: Battery, loop unit zz-aa	Page: 63
FAULT: Battery, techn address xxx	Page: 63
FAULT: Cables mixed COM-loop	Page: 64
FAULT: Charging external power supply	Page: 64
FAULT: Charging, techn addr xxx	Page: 64
FAULT: Checksum system program	Page: 64
FAULT: Cut-off SCI nn <-> SCI nn	Page: 64
FAULT: No reply ..... message for each unit that FT128 cannot find and "FAULT:	Page: 64
FAULT: Detector removed zz-aa	Page: 64
FAULT: Detector removed, techn address xxx	Page: 65
FAULT: Earth fault (minus)	Page: 65
FAULT: Earth fault (plus)	Page: 65
FAULT: Earth fault, techn address xxx	Page: 65
FAULT: EPU x	Page: 65
FAULT: Expansion board x	Page: 65
FAULT: External fuses	Page: 65
FAULT: External power supply	Page: 65
FAULT: Extinguishing system	Page: 65
FAULT: Factory settings	Page: 65
FAULT: Fan on loop unit addr xxx	Page: 66
FAULT: Fault warning routing equipment	Page: 66
FAULT: FB Silence switch active	Page: 66
FAULT: FBP x,	Page: 66
FAULT: Fuse on COM-loop	Page: 66
FAULT: High current consumption in CU	Page: 66



FAULT: High current on COM-loop	Page: 66
FAULT: Input	Page: 66
FAULT: Input x exp board x	Page: 67
FAULT: Interlocking input AA/PP	Page: 67
FAULT: Loop unit zz - aa ?	Page: 67
FAULT: Loop unit techn. address xxx ?	Page: 67
FAULT: Low battery capacity	Page: 67
FAULT: Low voltage	Page: 67
FAULT: Low voltage, techn address xxx	Page: 67
FAULT: Mains	Page: 67
FAULT: Mains, external power supply	Page: 68
FAULT: Mains, techn address xxx	Page: 68
FAULT: No reply zz-aa ?	Page: 68
FAULT: No reply techn. address xxx ?	Page: 68
FAULT: No reply AAU x	Page: 68
FAULT: No reply EPU x	Page: 68
FAULT: No reply, expansion board x	Page: 69
FAULT: Output Sx	Page: 69
FAULT: Output x expansion board x	Page: 69
FAULT: Output x, techn addr xxx	Page: 69
FAULT: Read/write site data (SSW)	Page: 70
FAULT: Restart, code xx addr yyyyyyyyyyy	Page: 70
FAULT: Sensor zone: xxx address: xx	Page: 70
FAULT: Sensor zone zz-aa, zz-aa ?	Page: 70
FAULT: Sensor zone techn. address xxx ?	Page: 70
FAULT: Several faults on COM-loop	Page: 70
FAULT: Short-circuit, internal COM-loop	Page: 70
FAULT: Short-circuit SCI nn <-> SCI nn	Page: 71
FAULT: Site specific data (SSD)	Page: 71
FAULT: Site specific data (SSD), AAU x	Page: 71
FAULT: Site specific data (SSD), EPU x	Page: 71
FAULT: Supervised input x addr xxx	Page: 71
FAULT: Wrong type, expansion board x	Page: 71
FAULT: Wrong type of unit zz-aa ?	Page: 72
FAULT: Wrong type of unit t.addr xxx ?	Page: 72
FAULT: Zone line input zz-aa	Page: 72
FAULT: Zone line input t.addr xxx	Page: 72
FAULT: Zone line input x exp board x	Page: 72

## **12 – EBLWin SOFTWARE INSTALLATION to PC**

1. **Refer to Operation Manual FT128 Rev 2.4, PAGE 75.**
2. Needed Hardware
  - a. EBLWin key 5094
  - b. Null modem serial cable
  - c. USB to Serial Converter to USB adapter
  - d. Laptop with Win7 - Win10



## **13 – OPERATION MANUAL FT128 Rev 2.4**

**Scan QR code to Search instructions and other relevant operational procedures.**

Software download

Restart

Perform Monthly test (H1)

Disable and re-enable (H2)

Set Calendar and Clock (H3)

Present System Status (H4)

Service (H5)

Acknowledge Faults (H6)

Perform Zone Test (Test Mode) (H7)

Maintenance (H8)

Interlocking Outputs and Inputs (H9)

Change Password (H10)



Fire Products & Solutions