

MDHREM - Press to Release Button for MDH





The MDHREM is a push button designed to manually open fire or smoke doors. The button is a momentary action switch fitted in a switch plate. The plate is used for flush mount applications. However, for surface mount, the plate can be mounted on a standard mounting block.

Installation

The 24Vdc power to the magnetic door holders is supplied by the C.I.E. Either +24V or 0V controls the door holders via the normally closed contact of the switch mechanism as shown in the drawing below.

Technical Specification

Operating Voltage	24Vac maximum current 10A
Switch	Single pole, rocker action
Material	High impact resistant material
Dimensions	117 (L) x 76 (W) x 12 (H) mm

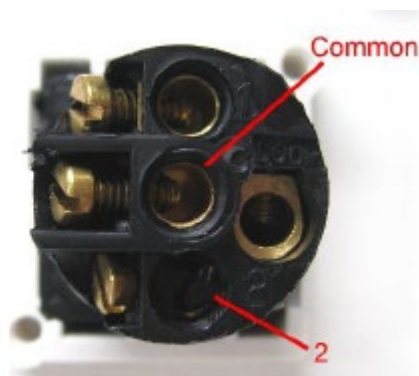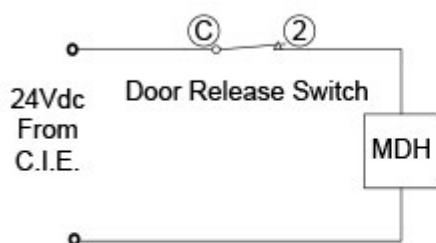

1. Use a small flat screw driver to dig out the plastic moulding over terminal 2 on the rear of the switch
2. Terminate the switch as per drawing shown above

NOTE: on the rear of the switch, the imprint "C" is the common terminal and "2" is the normally closed terminal.