

Fire Detectors

Conventional Photoelectric Smoke Detector

Model 4452

- Low profile design
- Latest IC technology / highest reliability
- Unleaded soldering



General

The photoelectric (optical) smoke detector has a low profile design. In the detection chamber is a high-efficient optical system consisting of an LED and a photodiode with two lenses. Scattered light (i.e. reflection of infrared light) is used to detect smoke. The latest IC technology is used to secure the highest reliability possible.

Reduces false fire alarms

The smoke enters the detection chamber through an insect filter and an optical labyrinth. This construction not only improves the smoke inflow but it also causes steam, fog, etc. to condense into moisture on its surfaces, to prevent false (nuisance) alarms. Furthermore the detector has a smart alarm algorithm which reduces the risk for false fire alarms.

Environmentally Friendly

The detector has unleaded soldering. The latest IC technology reduces the number of semiconductors and other electronic components to a minimum.

Compatibility

The conventional photoelectric smoke detector 4452 is a direct replacement for the photoelectric smoke detector 4352.

Miscellaneous

The detector is plugged in a conventional base (2324), connected to a conventional zone line input. The base has an LED that will light when the detector goes into alarm. There are also terminals in the base to connect an RIL.

Product applications

The detector is intended for indoor use and in dry premises. It is excellent to detect large, bright smoke particles as from a smouldering fire.

Used with FT420 and FT2FP Panels



Panasonic

Fire System Technology

Australia Head Office: 4 Pike Street Rydalmere NSW 2116
Ph+61 2 9684 1466 **Fx**+61 2 9684 4146 **Toll Free** 1300 78 FIRE


New Zealand Unit 106, The Zone, 23 Edwin Street Mount Eden
1024
Ph+64 9 638 4644 **Fx**+64 9 6384645 **Toll Free** 0800 220 007

Web: www.brooks.com.au (Aus) www.brooks.co.nz (NZ)

E & OE As our policy is one of continuous product development, we reserve the right to alter product details without prior notice. DS4452 03/04/2014

Type Number

4452 Photoelectric smoke detector

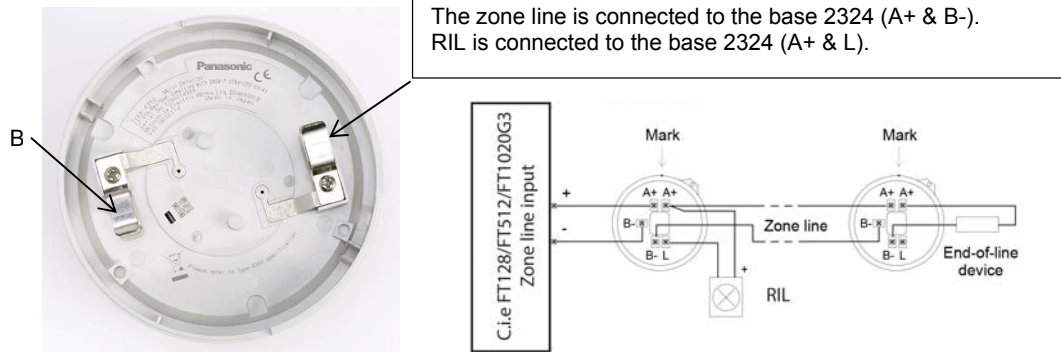

See also "Engineering Instructions for detector Type 4452".

In the detector:

A Contact for base 2324

B Contact for base 2324

The detector is plugged in a base 2324. End-of-line device depending on the zone line input.

Technical data

Voltage (V DC)	
rated	24
allowed	12-30
normal	24
Current consumption at nom. volt. (mA)	Depending on the base the detector is plugged into. For more details see the Datasheet
quiescent (detector only)	0.04
active (detector only)	min. 3
Ambient temperature (°C)	
operating	-10 to +50
storage	-25 to +75
Ambient humidity (% RH)	max. 95, non condensing
Ingress Protection rating (estimated)	IP 51
Sensitivity (obscuration; %/m)	4
Size Ø x h (mm)	102 x 38
Weight (g)	85
Construction / Colour	Modified polycarbonate / Grey (N8, Munsell colour code)
Approvals	AS7240.7:2004, ISO7240.7:2003 and EN54.7:2000+A1:2002+A2:2006 CE 13 EC Certificate no. 0786-CPD-21252



Panasonic

Fire System Technology

Australia Head Office: 4 Pike Street Rydalmere NSW 2116
Ph+61 2 9684 1466 **Fx**+61 2 9684 4146 **Toll Free** 1300 78 FIRE

New Zealand Unit 106, The Zone, 23 Edwin Street Mount Eden 1024
Ph+64 9 638 4644 **Fx**+64 9 6384645 **Toll Free** 0800 220 007

Web: www.brooks.com.au (Aus) www.brooks.co.nz (NZ)

E & OE As our policy is one of continuous product development, we reserve the right to alter product details without prior notice. DS4452 03/04/2014