

BAVISA240 - Visalert Warning Device

Device for the Deaf and Hearing Impaired

Key Features

- Hearing impaired warning device
- Interconnects to Brooks 230V smoke/heat alarms
- Built-in rechargeable battery back-up
- Easy installation
- Test switch
- Mains “Power on” and “Battery Low” fault indication
- Aesthetically pleasing design
- Intense 4.2 Joule white strobe light
- Unique anti-tamper mounting base
- 5 Year Guarantee (limited)

Product Description

Conventional Smoke Alarms are not effective in alerting those with hearing impairments, yet the early warning of a fire is no less important. Visalert is a visual warning device which can be interconnected with your Brooks 230v Battery backed smoke /heat alarms.

Visalert has a re-chargeable battery backup, a feature Brooks considers essential. The battery provides the necessary standby power so that the smoke alarm is still capable of providing a warning even if the 230 Volt mains supply fails (i.e. electrical fire). As the intense strobe light provides the warning for the hearing impaired person, this should be battery backed for the same reason.

Visalert can be placed in both the bedroom and living areas. The hearing impaired will be alerted whether in bed or watching television. For ease of installation Visalert utilises the same unique anti-tamper mounting base common to the Brooks 230 volt smoke and heat alarms.

Visalert and the smoke alarm are interchangeable providing greater flexibility to the user.



Technical Specification

Primary supply:	230V AC / 100mA Maximum
Secondary back-up battery:	12V / 0.7A sealed lead acid battery
Strobe:	4.2 Joules, Flash rate of 90 per minute, clear colour
Power ON Indication:	Green LED
Fault indication:	Yellow LED, steady illumination for battery low and flashing for battery fail
Maximum number per system:	Not limited, dependent on number of smoke/heat alarms fitted in the system
Mounting:	Plug in with anti-tamper base with option for flush or surface mounting
Temperature Range:	0°C to 40°C
Material:	Fire retardant high impact white plastic
Dimensions:	200mm diameter x 100mm H (including dome)
Weight:	950g (including battery)
Humidity:	15% to 95% Relative Humidity
Approvals:	Meets AS3000 requirements


Due to continual product development, Brooks reserve the right to alter product details and specifications without prior notice.

Head Office: Sydney, 4 Pike Street, Rydalmere 2116 | PO Box 7050 Silverwater BC1811
Regional Offices: Brisbane - Adelaide - Melbourne - Perth - New Zealand
www.brooks.com.au - Toll Free 1300 783 473



BAVISA240 - Visalert Warning Device

Visalert Warning Device - Mains Powered

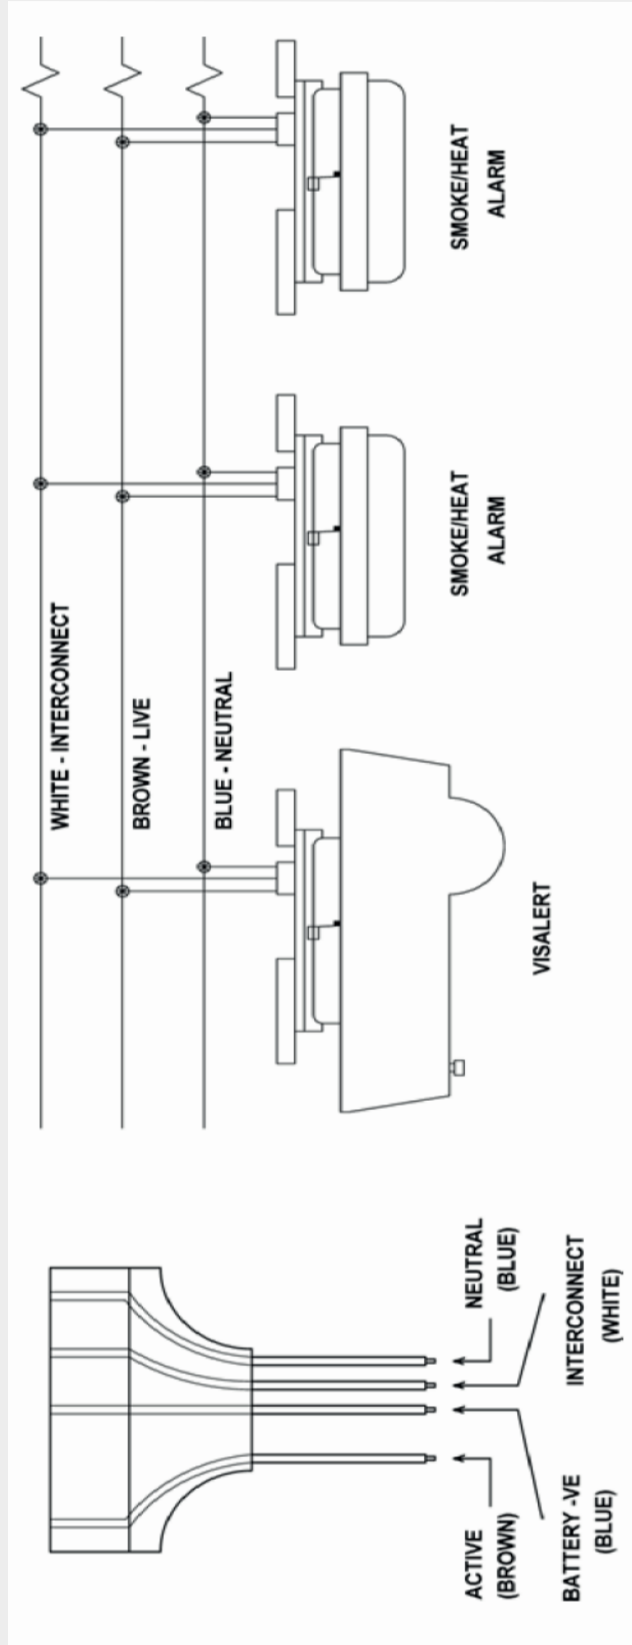

Due to continual product development, Brooks reserve the right to alter product details and specifications without prior notice.

Head Office: Sydney, 4 Pike Street, Rydalmere 2116 | PO Box 7050 Silverwater BC1811

Regional Offices: Brisbane - Adelaide - Melbourne - Perth - New Zealand

www.brooks.com.au - Toll Free 1300 783 473