

# BAVISA240 - Visalert Warning Device

## Device for the Deaf and Hearing Impaired

### Key Features

- Hearing impaired warning device
- Interconnects to Brooks 230V smoke/heat alarms
- Built-in rechargeable battery back-up
- Easy installation
- Test button to test strobe light
- Mains "Power on" and "Battery Low" fault indication
- Aesthetically pleasing design
- Intense 4.2 Joule white strobe light
- Unique anti-tamper mounting base
- 5 Year Guarantee (limited)

### Product Description

Conventional Smoke Alarms are not effective in alerting those with hearing impairments, yet the early warning of a fire is no less important. Visalert is a visual warning device which can be interconnected with your Brooks 230v Battery backed smoke/heat alarms.

Visalert has a re-chargeable battery backup, a feature Brooks considers essential. The battery provides the necessary standby power so that the Visalert is still capable of providing a warning even if the 230 Volt mains supply fails (i.e. electrical fire). As the intense strobe light provides the warning for the hearing impaired person, this should be battery backed for the same reason.

Visalert can be placed in both the bedroom and living areas. The hearing impaired will be alerted whether in bed or watching television.



### Technical Specification

**Primary supply:** 230V AC / 100mA Maximum

#### Secondary back-up

**battery:** 12V / 0.7AH sealed lead acid battery

**Strobe:** 4.2 Joules, Flash rate of 90 per minute, clear colour

#### Power ON Indication:

Green LED

**Fault indication:** Yellow LED, steady illumination for battery low and flashing for battery fail

#### Maximum number per system:

Not limited, dependent on number of smoke/heat alarms fitted in the system  
Plug in with anti-tamper base with option for flush or surface mounting

#### Mounting:

#### Temperature Range:

0°C to 40°C

#### Material:

Fire retardant high impact white plastic

#### Dimensions:

200mm diameter x 100mm H (including dome)

#### Weight:

950g (including battery)

#### Humidity:

15% to 95% Relative Humidity


#### Approvals:

Meets AS3000 requirements

### Compatibility

**Mains Power:** EIB140RC Series with EIB168RC  
EIB160e Series with EIB100MRF  
EIB3000 Series with EIB3000MRF

**Note:** For full specification and limitation for use refer to the specific product data sheet

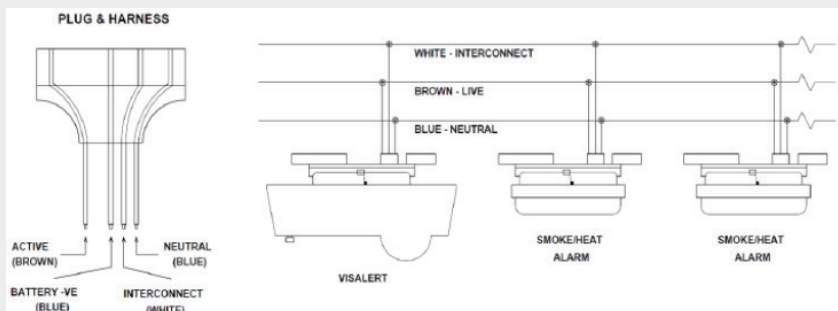

Due to continual product development, Brooks reserve the right to alter product details and specifications without prior notice.

**Head Office:** Sydney, 4 Pike Street, Rydalmere 2116 | PO Box 7050 Silverwater BC1811

**Regional Offices:** Melbourne - Brisbane - Adelaide - Perth - Auckland

www.brooks.com.au - Toll Free 1300 783 473