# RadioLINK<sup>+</sup> Module EIB600MRF for Battery Powered Smoke / Heat Alarms EIB600 Series



### FIB600MRF Module

(for use with EIB600 Series compatible Alarms only)

# Instructions

Read and retain carefully for as long as the product is being used. It contains vital information on the operation and installation of your Module. The leaflet should be regarded as part of the product.

If you are just installing this Module, the leaftet must be given to the householder. The leaflet is to be given to any subsequent user.

# **Table of Contents**

	page
Introduction	3
Compatibility Table	4
Installation and House Coding	5
Additional Features	7
Indicator Summary	g
System Examples	10
Testing the system	12
Interconnected Smoke/Heat Alarms & Carbon Monoxide Alarms	14
RadioLINK <sup>+</sup> Troubleshooting	15
Technical Specifications	16
Guarantee	17
Limitations of Radio Communications	18

### Introduction

The EIB600MRF RadioLINK+ Module is the next generation RF module designed to fit in the EIB650i series Smoke Alarms and EIB603TYC Heat Alarm. The EIB600MRF RadioLINK+ Module has added features not previously seen before in Brooks RadioLINK modules.

The primary function of the EIB600MRF is to interconnect all Brooks Alarms in a system by the means of an RF signal i.e. when one Alarm senses a fire event, the EIB600MRF module attached to that Alarm will transmit an RF signal that will activate the sounders in all the other Alarms in the system.

The EIB600MRF module is plugged into the rear of the base of a Brooks compatible Alarm (see Compatibility Table on page 4). RF communication through this module eliminates the need to install long interconnect wires between all the Alarms on different floors in different rooms. The EIB600MRF is powered from its own 3V Lithium battery.

The module also has "multiple repeater" transmission – this provides multiple signal paths to create a robust RF 'mesh' system and also increase the RF range.

Compatibility Table					
Intelligent Smoke Alarms					
Model	Hardwired Interconnect	RF <sup>1</sup> Capability	Compatible with EIB600MRF		
EIB650iC	Yes	Yes	Yes		
EIB650iW	No	Yes	Yes		
Heat Alarms					
Model	Hardwired Interconnect	RF <sup>1</sup> Capability	Compatible with EIB600MRF		
EIB603TYC	Yes	Yes	Yes		

1. Certain Alarms may be supplied (on request) with the appropriate RF module fitted

## Installation and House Coding

To fit the EIB600MRF module, plug it into the base of the compatible Alarm while being careful to align the pins and insert the flexible antenna into the antenna hole (See Fig 1). N.B. Ensure that the EIB600MRF is fully inserted.

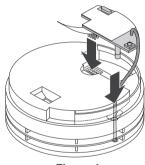


Figure 1

# **House Coding the Unit**


Power supply to the EIB600MRF will be confirmed by an initial flash of the red, blue and green LED on the cover (see Fig 2).

Press and hold the House Code button on the module until the blue light illuminates on the cover. (see Fig 2).

Immediately release the button, the blue light will flash rapidly and then stop. Now attach the Alarm to its mounting plate. (see 'Installation' section in the EIB650i Series booklet).

The flashing will repeat every 5 seconds thereafter. Repeat this procedure for all RF devices in the system.

Check to ensure all RF devices have been successfully House Coded. This can be done by counting the number of blue flashes on each RF Module. The number of flashes should correspond to the number of RF devices in the system. (i.e. 4 flashes if there are 4 RF devices in the system).

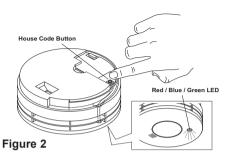

N.B. We recommend, for ease of installation and RF communication, that up to 12 RF devices can be installed in any one RF coded system. Please contact us for further advise if additional RF devices are required.

You can exit this mode by pressing the House Code button on one of the RF Alarms. Keep the button pressed until the blue light comes on solid and then release.

The Alarm will now send a signal to all the other RF devices in the system to exit House Code. Alternatively, the RF devices will automatically exit the House Code mode after 30 minutes. Note: Some RadioLINK devices do not support the on demand exit House Code feature. You may allow them to automatically exit House Code after the time period or if you wish, you can do it manually. Consult the individual RadioLINK device manual for further instructions.

To check the system, press the test button on any Alarm. After a few seconds all Alarms should now sound. All Alarms in the system should be checked similarly.

Caution: Do not House Code another group (e.g. adjacent apartment) until the current House Code has been completed.

### **Factory Reset**

Sometimes in order to resolve an RF communication issue it may be necessary to reset (factory reset) and House Code the system again. To do so, press and hold the House Code button until you see a flashing blue light on the Alarm cover (approx. 7 seconds), release immediately. Repeat this procedure on all other Alarms.

### **Additional Features**

The EIB600MRF RadioLINK<sup>+</sup> Module provides additional features not available with Brooks RadioLINK products. The following features will only work with RadioLINK<sup>+</sup> devices.

- 1. Remote House Coding (required if you want to add an Alarm to an installed system)
- 2. Data Extraction

\*Note these functions will not be available unless you have completed House Code Entry

### 1. Remote House Coding

If it is necessary to extend an RF system or you find that you want to add an extra Alarm to a system you can now do so quite simply via the 'Remote House Coding' feature. Firstly using a screwdriver, press and hold the House Code button of one of the previously installed Alarms until you see all colours flashing (red, blue, green). Immediately release the button. This Alarm will now send an RF message to all the previously installed (compatible) devices to re-enter House Code mode.

Similarly, install and put the new Alarm you wish to add to the system into House Code mode (see "Installation and House Coding" section). As before, allow sufficient time so that all Alarms are now house coded correctly (this can be confirmed by counting the number of flashes on each Alarm). You can then exit House Code mode manually or let it exit automatically after 30 minutes. (N.B. for this feature to work all devices in the system must be RadioLINK+).

#### 2. Data Extraction

The EIB600MRF RadioLINK+ Module allows for the extraction of information from a Brooks Compatible Alarm, using a Brooks download device. Once the system has been set up, information can be accessed securely from within or outside a property if access is an issue The event log can contain very useful information about any recorded events in the history of the Alarm such as: Fire Events, Alarm Head removals, Button Tests, and so on.

Event logs can be retrieved as many times as necessary.

EIB600MRF Indicator Summary						
Normal Operation		Blue LED	Red LED	Green LED	Sounder	
Power Up		1 flash	1 flash	1 flash	Off	
Standby		Off	Off	Off	Off	
Alarm		3.5 Sec flash followed by flash every 10 Sec	Off	Off	Full Sound	
Head Removal		3.5 Sec flash every 6 mins for 4 hrs	Off	Off	Off	
Low Battery (EIB603TYC)*		Flash every 60 Sec	Off	Off	Off	
Low Battery (EIB650iC / iW)*		Flash every 60 Sec	Off	Off	1 beep with flash	
Mode-Enter / Exit	Button Action	Blue LED	Red LED	Green LED	Sounder	
House Code Enter	Press & Release on Solid Blue	Flashes briefly & stops	Off	Off	Off	
In House code		(1 flash per unit) every 5 Sec **	Off	Off	Off	
House code Exit	Press & Release on Solid Blue	3.5 Sec flash	Off	Off	Off	
Factory Reset	Press & Release on Flashing Blue	Rapid flashing followed by single flash	Off	Off	Off	
Remote House Coding	Press & Release on Multi- Colour Flashing	Rapid flashing followed by 3.5 Sec flash	Off	Off	Off	

 $<sup>^{\</sup>mbox{\scriptsize $\star$}}$  EIB600MRF Low Battery indicators when installed in these Alarms

<sup>\*\*</sup> See 'Installation and House Coding' section for further details

## System Examples

# RF System (RadioLINK & RadioLINK+) RadioLINK RadioLINK Smoke Alarm Smoke Alarm RadioLINK RadioLINK Heat Alarm Smoke Alarm RadioLINK+ Smoke Alarm **Data Extraction** RadioLINK<sup>+</sup> Heat Alarm

Note: Remote House Coding / Monitoring / Data Extraction only available on RadioLINK+ Alarms

# RadioLINK<sup>+</sup> System

RadioLINK<sup>+</sup> Smoke Alarm



RadioLINK<sup>+</sup> Heat Alarm



RadioLINK<sup>+</sup> Smoke Alarm



RadioLINK<sup>+</sup> Heat Alarm



RadioLINK<sup>+</sup> Smoke Alarm






**Data Extraction** 

### Testing the System

Frequent testing of the system is a requirement to ensure its reliable operation. Guidelines and best practices for testing are as follows:

- 1. After the system is installed.
- 2. Regularly (monthly testing is recommended).
- After prolonged absence from the dwelling (e.g. after holiday period).
- 4. After repair or servicing of any of the components.
- 5. After renovations to the house.

To test an individual Alarm press and hold the test button until the horn sounds. This ensures that the Alarm is powered and that the circuit is functioning correctly.





To test the RadioLINK<sup>+</sup> system, press and hold the test button on one of the Alarms. The blue LED from the EIB600MRF will illuminate for approximately 3.5 seconds. Continue to hold the test button until all the Alarms in the system are sounding. This will take a few seconds depending on the number of Alarms and their locations in the system, e.g. a system with 12 Alarms may take up to 45 seconds for them all to sound. Release the test button when the test is completed. The local Alarm will stop sounding but you will hear the other Alarms still sounding in the distance. All Alarms should be checked in a similar way.

### **Module Battery Check**

It is important to ensure that the batteries on both the Alarm and the module itself are in full working order. Depending on the Alarm that the EIB600MRF is inserted to, there will be slightly different indicators for low battery on the Alarm itself (see table below).

N.B. Press the test button on each Alarm and check that all the Alarms sound.

Low Battery Indicator Table			
Alarm Model	Module Low Battery	Alarm Low Battery	
EIB603TYC	1 blue flash with no beep every 60 sec	1 beep every 40 sec with <b>no</b> flash	
EIBOUSTIC	2 sec alarm every 4 hours	i beep every 40 sec with <u>no</u> hash	
EIB650iC / 650iW	1 blue flash with a beep every 60 sec	1 beep every 32 sec with a yellow LED flash	
EIBOSUIC / OSUIW	1 beep every 4 hours	i beep every 32 sec with a yellow LED hash	

In each of these cases you should replace either the Alarm or the module depending on the low battery condition.

### Beeping in RF System

One of the features of Brooks RadioLINK & RadioLINK\* systems is that if there is a fault either in the Alarm itself, or in the RF module fitted, a beep will be transmitted around the system every 4 hours. Depending on the Alarm type, the beep may just be a short beep or it may be a 2 second alarm. If your RF system is demonstrating this, you have a fault either in 1 of your Alarms or in 1 of the RF modules fitted.

In order to find the problem unit, please visually check each Alarm. The fault will be indicated on the Alarm through a combination of beeps or flashes within a 60 second period. (see individual Alarm booklet for indicators).

N.B. When replacing Alarms or modules, please remember to housecode and test the system again.

### End of Life (EOL) Check

Check the 'replace by date' label on all EIB600MRF modules and attached Alarms. If the date has been exceeded then the device should be replaced.

# Interconnected Smoke/Heat Alarms & Carbon Monoxide Alarms

### Identifying source of Alarm

Brooks Smoke/Heat Alarms and Carbon Monoxide Alarms can be interconnected via RadioLINK or RadioLINK+ so that one device sensing danger will cause all the other Alarms to sound.

When a system sounds, check to see which device has its red light flashing rapidly - this it the source of the alarm.

If it is a Smoke/Heat Alarm, evacuate the residence and follow the instructions in the Smoke/Heat Alarm manual.

If it is a Carbon Monoxide Alarm, ventilate the residence and follow the instructions in the Carbon Monoxide Alarm manual.

For added convenience we recommend that an EIB450 Alarm Controller is used

with these systems. When there is an alarm, an icon on the EIB450 Alarm Controller shows if it is a Fire or CO incident and can be remotely controlled accordingly.

### RadioLINK<sup>+</sup> Troubleshooting

It is important that all Alarms in your system communicate with each other. The number of walls, ceilings and metal objects in the signal path will reduce the strength of the RadioLINK<sup>+</sup> signals between the Alarms. Accordingly, one or more CO/Smoke/Heat Alarms may have difficulties in communicating to all the other Alarms in the system.

- If, when checking the RadioLINK+ interconnection, some of the Alarms do not respond to the button test, then you will need to either:
- (i) Position another RadioLINK<sup>+</sup> Alarm to act as a 'repeater' between the Alarms which are not communicating and so shorten the path and/or by-pass an obstacle which is blocking the signal. When the new Alarm is fitted, House Code all Alarms again, as described above.
- (ii) rotate / re-locate the Alarms (e.g. move them away from metal surfaces or wiring). After making these changes to the RF signal path, the RadioLINK<sup>+</sup> signals may still not be reaching all the Alarms in your system, even though they have already been House Coded successfully. (see Section on "Limitations of Radio Communications"). It is important to check that all Alarms are communicating in their final installed positions. If Alarms are rotated, have had their antennas extended and/or re-sited, we would recommend that all the Alarms are returned to the factory settings and then House Coded again in their final positions (see above). The RadioLINK<sup>+</sup> interconnection should then be checked again by button testing all units.

(Note: The RadioLINK<sup>+</sup> module can be returned to the originally factory settings by pressing and holding the House Code switch until the blue light flashes and then releasing. This will take about 7 seconds. This clears the House Codes that have been learnt).

## **Technical Specifications**

Supply Voltage: 3V internal lithium battery (non-replaceable)

RF Range: A minimum of 100 metres in free space

RF Visual Indicator: Blue light flashes continuously for 0.5 to 3.5 seconds while

transmitting RF signal

RF Frequency: 926MHz (1% duty cycle)

**Dimensions:** 57mm length x 30mm depth x 18mm height

Temperature Range: 0° to 40°C

Humidity Range: 15% to 95% Relative Humidity (non-condensing)
Interconnect \*: Up to 12 RadioLINK\* or RadioLINK modules

Optional Accessories: - EIB407RF Manual Call Point

- EIB428RF Relay Module

- EIB450 RadioLINK Alarm Controller

Approvals: ACMA compliance to AS/NZS 4268:2012

EMC performance to EN 301 489-1 in accordance

with EN 301 489-3

<sup>\*</sup> We recommend, for ease of installation and RF communication, that up to 12 RF devices can be installed in any one RF coded system. Please contact us for further advise if additional RF devices are required.

### Guarantee

Brooks guarantees this RF RadioLINK<sup>+</sup> Module for five years from date of purchase against any defects that are due to faulty materials or workmanship. This guarantee only applies to normal conditions of use and service, and does not include damage resulting from accident, neglect, misuse, unauthorised dismantling, or contamination howsoever caused. This guarantee excludes incidental and consequential damage. If this RF RadioLINK<sup>+</sup> Module should become defective within the guarantee period, it must be returned to Brooks, with proof of purchase, carefully packaged, with the problem clearly stated. We shall at our discretion repair or replace the faulty unit. Do not interfere with the Alarm or attempt to tamper with it. This will invalidate the guarantee, but more importantly may expose the user to shock or fire hazards. This guarantee is in addition to your statutory rights as a consumer.

### Limitations of Radio Communications

Brooks radio communication systems are very reliable and are tested to high standards. However, due to their low transmitting power and limited range (required by regulatory bodies) there are some limitations to be considered:

- (i) Receivers may be blocked by radio signals occurring on or near their operating frequencies, regardless of the House Coding.
- (ii) Alarms with RadioLINK<sup>+</sup> modules should be tested regularly, at least monthly. This is to determine whether there are sources of interference preventing communication, that the radio paths have not been disrupted by moving furniture or renovations, and if so, to give a warning of these and other faults.



The crossed out wheelie bin symbol that is on your product indicates that this product should not be disposed of via the normal household waste stream. Proper disposal will prevent possible harm to the environment to the unan health. When disposing of this product please separate it from other waste streams to ensure that it can be recycled in an environmentally sound manner. For more details on collection and proper disposal, please contact your local government office or the retailer where you purchased this product.



### **BROOKS**

4 Pike Street, Rydalmere, NSW 2116, Australia.

Unit 106 The Zone, 23 Edwin Street, Mt Eden Auckland 1024 New Zealand.

1300 78 FIRE www.brooks.com.au

© Brooks 2016 P/N B18643 Rev1